 


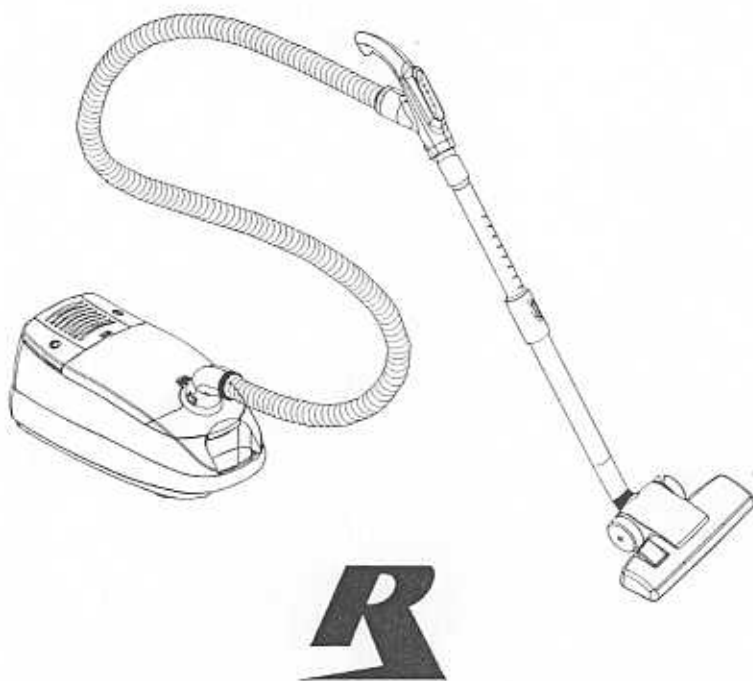

Canister Vacuum Cleaner

Operating Instructions

For models RC-1700S



Before operating the unit, please read these instructions completely.

IMPORTANT SAFETY INSTRUCTIONS

Read All Instructions Carefully Before Using This Appliance

When using an electrical appliance, basic precautions should always be followed, including the following :

WARNING - To reduce the risk of fire, electric shock, or injury :

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used near children.
4. Use only as described in this manual.
Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands
9. Do not put any object into openings. Do not use with any opening blocked:
keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
14. This appliance is intended for household use only and not for commercial or industrial use
15. Do not operate the cleaner if :
 - the power cord is damaged.
 - the hose shows visible signs of damage.
16. Do not use without dust bag and/or filters in place.
17. Hold plug when rewinding into cord reel. Do not allow plug to whip when rewinding.
18. The hose contains electrical wires. Do not use if damaged, cut or punctured.
Avoid picking up sharp objects.
19. To reduce the risk of electric shock, this appliance has a polarized plug.
20. Do not pick up anything that is burning or smoldering, such as cigarettes, matches, or hot ashes

SAVE THESE INSTRUCTIONS

CONTENTS

CANISTER FEATURES	4 ~ 5
HOW TO USE CLEANING TOOLS	6
HOW TO REPLACE VACUUM BAG	6
HOW TO REPLACE FILTERS	7
PRECAUTION FOR SAFE USE	8
BEFORE ASKING FOR SERVICE	9

DESCRIPTION AND USING

HOSE HANDLE CONTROL

When lit, change vacuum bag or check for clog in hose.

When lit, change exhaust filter. (page 7)

On /Off Button

CHECK BAG

SERVICE FILTER

MAX

HIGH

MED

LOW

SUCTION

+ Increase power


- Decrease power

ON

OFF

Power Levels:

MAX	100%
HIGH	75%
MED	50%
LOW	25%

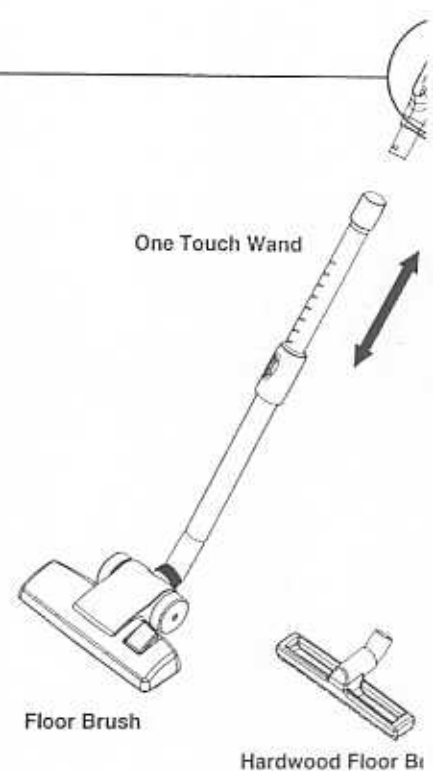 

FLOOR BRUSH

 
floors carpet

- Use this brush for cleaning both carpeted and uncarpeted floors.

HARDWOOD FLOOR BRUSH


- For use on tile hard wood, & linoleum floor.

- Insert the backside

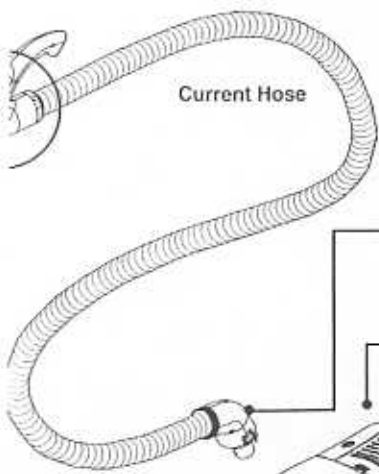


Current Hose

 Cleaning Tool Depository

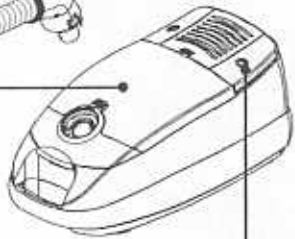

Vacuum Cleaner

 HOSE ADAPTER

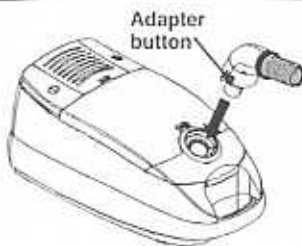

Adapter button

 
- When separating the hose from the body, pull the hose adapter while pressing the button.

MAIN ON / OFF SWITCH



- ON - Vacuum cleaner power is Max
- OFF - All power is off.

FLOOR BRUSH STORAGE

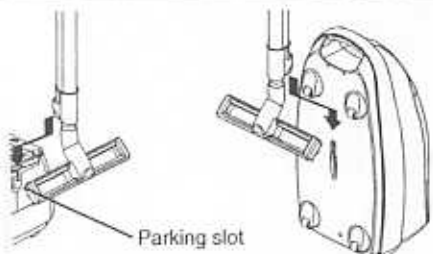

Parking slot

 
ward holder into the parking slot on bottom or of unit.

CORD REWIND



HOW TO USE CLEANING TOOLS

- Open the tool cover lid to access tools.

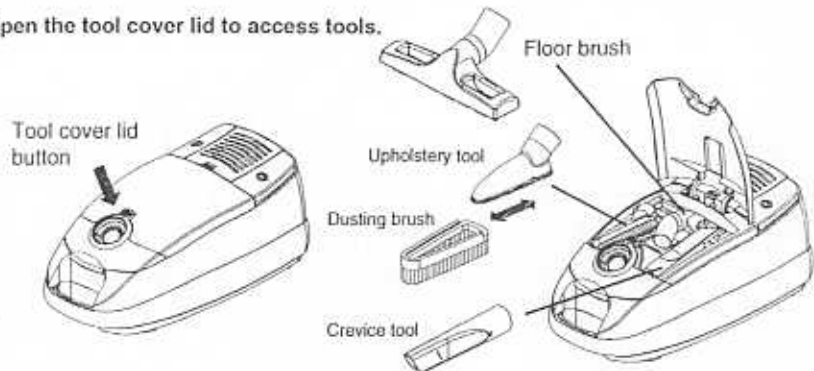

- On-board tools can be attached either to the power handle or to the end of the wand.

Floor brush: effective for hard surface cleaning (wood, tile, etc)

Upholstery tool: ideal for cleaning furniture.

Dusting brush: (slides off the end of the upholstery tool) for shelves, tables, etc.

Crevice tool: designed to clean in tight spaces (ie between sofa cushions)

REPLACING VACUUM BAG



- Turn canister off, remove hose, & open the dust cover.

- Grab the bag collar and pull the vacuum bag out of the dust bag holder.
- Insert new bag.
- **Do not re-use vacuum bag.**

 
- Dust cover will not close without a bag in the unit or unless the bag is fully inserted.

NOTE: The "change bag" light is located on the power handle and will light up when either the bag is full or when a clog is in the machine. If upon inspection the bag is not full, please inspect the hose or wand for a clog and remove.

REPLACING & CLEANING FILTERS


Replacing the charcoal filter:

- Unplug canister and remove the hose.
- Open the dust cover and locate the charcoal filter behind the bag.
- Remove filter inlet case and discard used filter.
- Insert new charcoal filter into filter case and re-insert case.
- Close the dust cover.

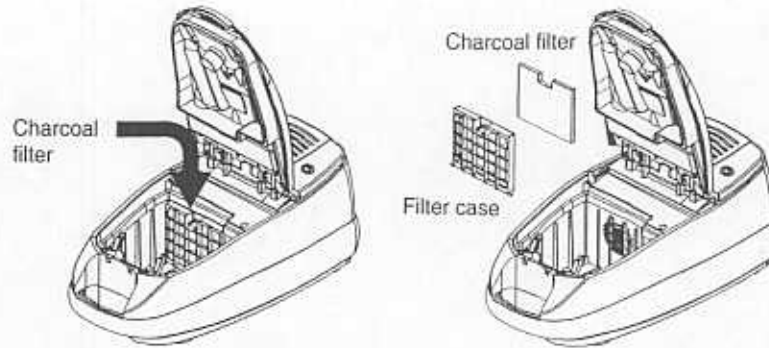

Replacing the S-Class HEPA filter:

 - Unplug canister and remove HEPA filter cover.
- Remove and discard used HEPA filter.
- Insert new S-Class HEPA filter.
- Plug canister.
- Press the "reset filter button" located next to the S-Class HEPA filter.
- Reinsert HEPA filter cover onto the machine.

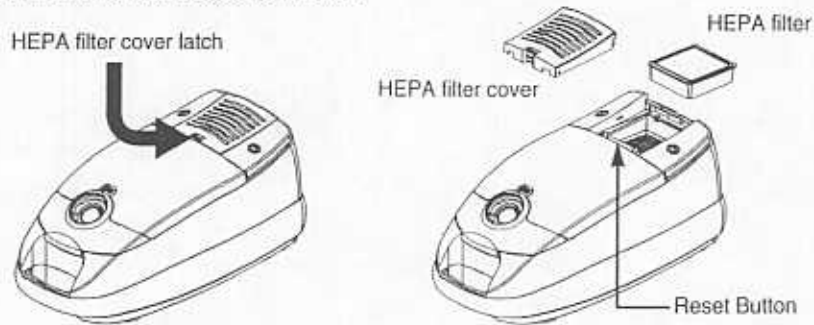

NOTE : It is recommended to change the S-Class HEPA filter when the "service filter" light is engaged on the power handle. Genuine S-Class HEPA filters cannot be washed or re-used.

PRECAUTION FOR SAFE USE

This vacuum cleaner should be used for normal dry household dust and dirt.

The manufacturer cannot be held responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is used for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.

- Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag.



- When rewinding the power cord, hold the plug body before pressing the cord rewind button to prevent from whipping.

 
- Do not pull the power cord out beyond the red mark.



- Make sure a dust bag and a motor protection filter are always inserted.



- This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug fits into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

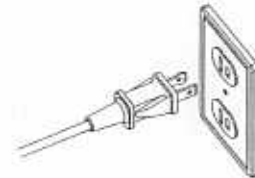

BEFORE ASKING FOR SERVICE

- Please check each item below if you have trouble with your cleaner.
Before checking, ensure that the cleaner is unplugged from the power supply.

Problem	Check Point	Note
• Suction power is weak.	<ul style="list-style-type: none">• Dust bag• Wand or hose	<ul style="list-style-type: none">• If dust bag is full, replace it.• If clogged or blocked, remove the object.
• The cleaner does not work.	<ul style="list-style-type: none">• Is the hose adapter inserted into the suction opening of the cleaner completely?• When the dust bag is full or blocked or any of the accessories are blocked, the over-heating protection for the motor is activated.	<ul style="list-style-type: none">• Insert it completely.• Switch off and unplug the cleaner and check the dust bag and accessories and remove any blockages. The cleaner can be switched on again after approximately 20 minutes.
• Power cord does not rewind.	<ul style="list-style-type: none">• Power cord	<ul style="list-style-type: none">• Pull the power cord out a little and press the cord rewind button.
• Power cord won't pull out of the cleaner.	<ul style="list-style-type: none">• Power cord	<ul style="list-style-type: none">• Do not pull it by force. Rewind it a little by pressing the cord rewind button and pull it out

SPECIFICATIONS

Model	RC-1700S
Rating	120V/60Hz
Power	9.5 Amps
Weight	20.1 Pounds
Dimension (L X W X H)	21.3" x 11.4" x 9.8"
Cord Length	27 feet

- Specifications can be changed for improvement without notice.