


Owner's Manual
Model SLPLUS

SupraLite plus

by **RICCAR**

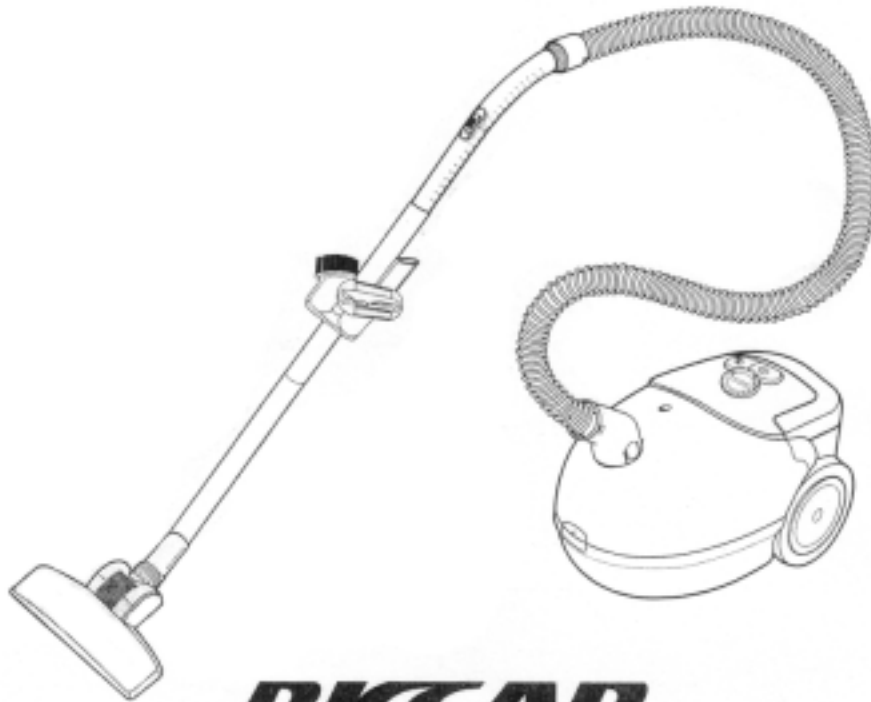


RICCAR
AMERICA

Thank you for purchasing our product. To ensure you get the best results, please read this manual and follow the user instructions. This manual should be kept for any future reference.

To locate your nearest Authorized Riccar Dealer for sales or service, please visit our website at www.riccar.com or call from within the USA at 877-302-4746.


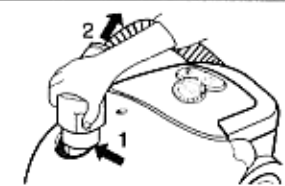
DESCRIPTION AND OPERATION

SUCTION POWER CONTROL

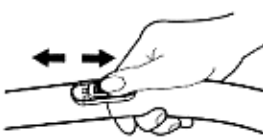


- The suction power control at the hand grip enables you to control suction power.

HOSE CONNECTION


- Connecting the hose : insert the hose firmly into the hose inlet. ("Click")
- Disconnecting the hose: press the button and pull the hose out of the vacuum cleaner.

ELECTRONIC POWER CONTROL

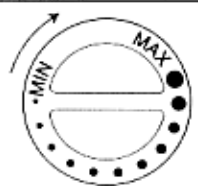


- Turn the dial to control motor power.

ON/OFF SWITCH

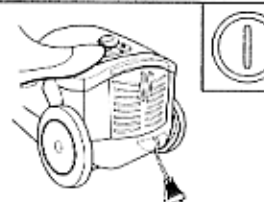


- Press the on/off switch.

CORD REWIND BUTTON

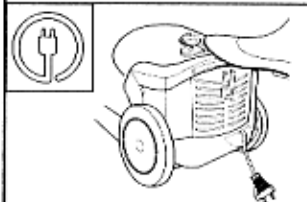


- Rewind the power cord by pressing the cord rewind button.


PIPE CONNECTION

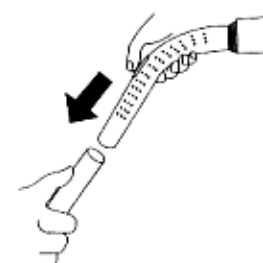

- To Connect the nozzle, hold the tubes and the handle: insert the narrowed section into the wide section.

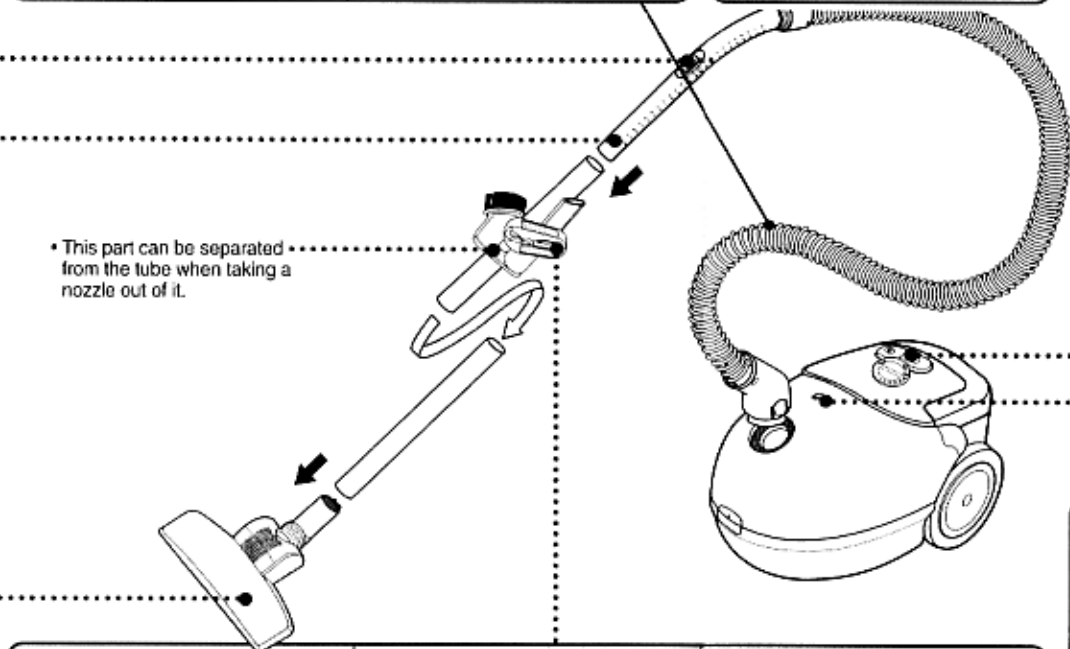

DUST METER



- When the color of the dust meter is changed to RED, change the dust bag.

WIDE SUCTION NOZZLE



- Use this nozzle for cleaning both carpeted and uncarpeted floors.


UPHOLSTERY NOZZLE




CREVICE NOZZLE



DUSTING BRUSH

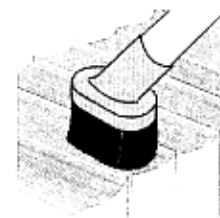


PRACTICAL PARKING

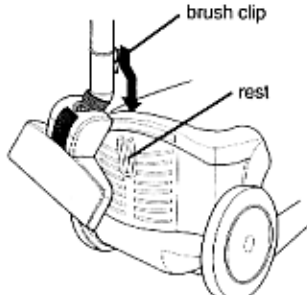

- If you want to stop cleaning for a while, you can place the brush clip into the rest.

STORAGE

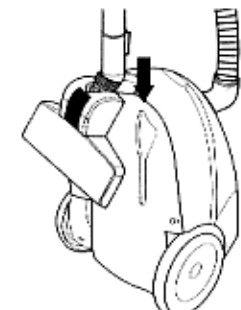




- If you want to store the cleaner, hitch the brush clip onto the vacuum cleaner.

CLEANING THE FILTER

<p>EXHAUST FILTER</p>  <ul style="list-style-type: none">• Switch off and lift the handle.	 <ul style="list-style-type: none">• Pull the filter case upwards from the cleaner.	 <ul style="list-style-type: none">• Separate the filter from the filter case and shake the dust out of the filter.
<p>MOTOR PROTECTION FILTER</p>  <ul style="list-style-type: none">• Switch off and open the cover.	 <ul style="list-style-type: none">• Hold the cover while taking the filter out of the cleaner.	 <ul style="list-style-type: none">• Shake the dust out of the filter.

CHANGING THE DUSTBAG

 <ul style="list-style-type: none">• Switch off and open the cover.	 <ul style="list-style-type: none">• Hold the cover while separating the dustbag from the dustbag holder.	 <ul style="list-style-type: none">• Insert the new dustbag in the dust bag holder properly as shown in picture. <p><small>Note: If no dustbag has been placed into the dustbag holder, the cover cannot be closed.</small></p>
--	--	--

PRECAUTIONS FOR SAFE USE

This vacuum cleaner should only be used for normal dry household dust and dirt.

The manufacturer cannot be responsible for any damage caused by use or operation of the cleaner contrary to these instructions.

If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage.

- Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag or make a fire.



- When rewinding the power cord, hold the plug body before pressing the cord rewind button to prevent whipping.
- Do not pull the power cord out beyond the specified length.



- Make sure a dust bag and a motor protection filter are always inserted.



- This product provided with a cable which, if damaged, must be replaced by a repair shop authorized by the manufacturer since special tools are required.



BEFORE ASKING FOR SERVICE

■ Before Asking for Service, please check each item below if you have trouble with your cleaner.

PROBLEM	CHECK POINT	MEASURE
• Suction power is weak.	• Dust bag • Pipe or hose	• If dust bag is dirty, replace it. • If clogged or blocked, remove the object.
• The cleaner does not work.	• Power cord • on/off switch	• Check if power cord is plugged. • Check if the power switch is turned on.
• Power cord does not rewind.	• Power cord	• Pull the power cord out a little and press the cord rewind button.

SPECIFICATIONS

Model	SLPLUS
Rating	120V/60Hz
Watts	MAX. 1300W(CEE 1100W)
Weights(Net)	5.1kg
Dimension (L X W X H)	354 X 240 X 262mm

• Specifications can be changed for improvement without notice.